

## Cleaning and Maintenance

- The installed floor should be maintained temperature of 13°C and 30°C throughout its service life.
  
- **Prevention**
  - Always protect floors when moving heavy objects to prevent permanent scratches and tears.
  - Use appropriate wide floor protectors under tables, chairs, and any heavy furnishing to avoid permanent damage.
  - Place walk off mats at all entrances, it helps protect the floor from water, grease, sand and dust
  - During peak sunlight hours, the use of blinds or curtains is recommended. Prolonged direct sunlight can result in discoloration and volatile temperature variations causing damage to the floor.
  - Do not allow solvent to the seams, this may cause damage or become moldy.
  
- **Routine Maintenance**
  - Routine cleaning is important to prevent particles from abrading the surface of resilient floors.
  - Clean the floor surface regularly.
  - General cleaning can be carried out by sweeping, vacuuming, wet wiping. For heavy soiling use a polyurethane cleaner.
  - Use a dry cloth or vacuum cleaner for cleaning. When water or any cleaning liquid is used, please squeeze out all water before cleansing.
  - All stain-forming and aggressive substances must be immediately removed from the surface.
  - Periodically wax the floor surface to keep it always better.